


User Manual

Revolving Door

ASSA ABLOY RD600-2 (CDC500)

ASSA ABLOY
Entrance Systems

Experience a safer
and more open world

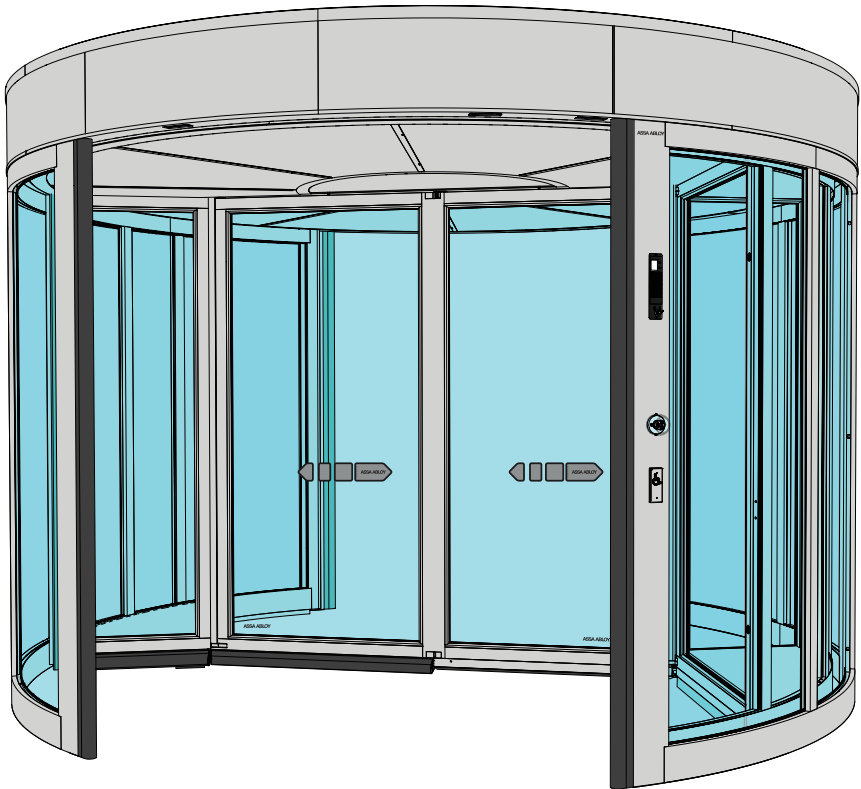

Original instructions

CONTENTS

| | |
|---|----|
| Presentation of notes and warning signs | 4 |
| WARNING: Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions. | 4 |
| Congratulations on your new automatic door! | 7 |
| Electronic equipment reception interference | 7 |
| Environmental requirements | 7 |
| Product liability | 7 |
| Warranty | 8 |
| Service | 8 |
| Intended use | 9 |
| Technical specification | 9 |
| How the ASSA ABLOY RD600-2 works | 10 |
| Main parts | 11 |
| Settings and operation PCD | 12 |
| General information PCD | 12 |
| Information prompts on PCD display | 12 |
| Access code | 13 |
| Changing operating mode | 14 |
| Real time operation | 17 |
| Safety | 21 |
| Safety devices on the door | 21 |
| Emergency operation | 23 |
| Regular safety checks | 25 |
| Troubleshooting | 28 |
| Supervision system | 28 |
| Code list | 29 |
| Service/Maintenance | 30 |
| Service request | 30 |
| Options | 31 |
| Emergency stop button on the outside | 31 |
| Lock system | 31 |
| Automatic sliding centre door leaves | 32 |
| Reception panel | 33 |
| Extra PCD | 33 |
| Climate control | 34 |

| | |
|---|----|
| Quick guide changing operating mode | 35 |
| Other products from ASSA ABLOY Entrance Systems | 35 |
| Declaration of conformity | 37 |
| | 37 |
| | 37 |

ASSA ABLOY as word and logo are trademarks owned by the ASSA ABLOY Group



© ASSA ABLOY Entrance Systems, 2022

Technical data subject to change without notice.

Backtrack information: folder:Workspace Main, version:a742, Date:2022-07-08 time:05:40:58, state: Frozen

Presentation of notes and warning signs

Various symbols and texts are used in this manual for easier understanding and identification.

| |
|--|
| <p>Note! When you see Note! it contains useful advice and information to ensure correct and compliant usage of the system.</p> |
|  <p>Potential hazardous situation that can lead to either minor or severe injuries or death and cause either minor or substantial property damage.</p> |
|  <p>Potential hazardous situation that could lead to danger of electric shock and cause serious injury or death.</p> |

WARNING: Important safety instructions. It is important for the safety of persons to follow these instructions. Save these instructions.



- Failure to observe the information in this manual may result in personal injury or damage to equipment.
- To reduce the risk of injury of persons - use this door set only as a pedestrian door.
- The mains power supply shall be installed with protection and an all-pole mains switch with isolating capability of Category III, shall be installed according to local regulations.
- Frequently examine the installation for imbalance where applicable and signs of wear or damage to cables, springs and mounting. Do not use if repair or adjustment is necessary.

- Do not use the equipment if repair or adjustment is necessary.
- **WARNING:** the drive shall be disconnected from its power source during cleaning, maintenance and when replacing parts.
- The operator can be used by children over 8 years of age if they have been instructed by a person in charge of their safety concerning use of the appliance in a safe way and understand the hazards involved.
- The operator can be used by children 8 years of age or younger if they are supervised by a person responsible for their safety.
- The operator can be used by persons with impaired physical, sensory or mental capacity if they have been instructed by a person in charge of their safety concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children.
- Do not let children or anyone climb on or play with the door or the fixed/remote controls.
- Risk of battery explosion if wrong type of battery is used.
- The doorset can be operated automatically by sensors or manually by activators.
- Do not push the door leaf when the door is in operation.
- Do not dash through a closing door.

- This appliance may contain batteries that are only replaceable by skilled persons.
 - The battery must be removed from the appliance before it is scrapped
 - The appliance must be disconnected from the supply mains when removing the battery.
 - The battery is to be disposed of safely.
- Ensure that controls that can be set for a locked position are only activated when there are no other persons in the room.

Congratulations on your new automatic door!

ASSA ABLOY Entrance Systems AB has developed automatic doors for more than 50 years. State-of-the-art technology and carefully tested materials and components provide you with a superior product.

As with all other technical products, your automatic door requires periodic maintenance and service. It is essential that you know your automatic door (system) and that you recognize the importance of maintaining it in compliance with applicable standards for safety.

Your local ASSA ABLOY Entrance Systems-authorized representative is familiar with these standards, as well as applicable local codes and ASSA ABLOY Entrance Systems recommendations for power-operated pedestrian doors. Service and adjustments performed by your ASSA ABLOY Entrance Systems-authorized representative, will ensure safe and proper operation of your automatic door unit.

Electronic equipment reception interference

The equipment may generate and use radio frequency energy and if not installed and used properly, it may cause interference to radio, television reception or other radio frequency type systems.

If other equipment does not fully comply with immunity requirements, interference may occur.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient the receiving antenna.
- Relocate the receiver with respect to the equipment.
- Move the receiver away from the equipment.
- Plug the receiver into a different outlet so that equipment and receiver are on different branch circuits.
- Check that protective earth (PE) is connected.

If necessary, the user should consult the dealer or an experienced electronics technician for additional suggestions.

Environmental requirements

The packages shall be stored indoors, in a dry condition at all times during transportation and reloading. Packages are wrapped with plastic tarpaulin and can be stored outdoors for a shorter while during installation, at the installation site.

The packing material is mainly composed of wooden crates, wooden pallets, cardboard, plastic tarpaulin and plastic wrappings.

Make sure to properly remove and recycle (or reuse) all packing material according to local regulations.

ASSA ABLOY Entrance Systems products are equipped with electronics and may also be equipped with batteries containing materials which are hazardous to the environment. Disconnect power before removing electronics and battery and make sure it is disposed of properly according to local regulations (how and where) as was done with the packaging material.

Product liability

According to regulations, the following are the responsibility of the owner or caretaker of the equipment

- that the equipment operates correctly, so that it gives sufficient protection in regard to safety and health

- that the equipment is operated and regularly maintained, inspected and serviced by someone with documented competence in the equipment and in applicable regulations
- that the provided “Service Log Book” and “Site Acceptance Test and Risk Assessment” documents (PRA-0003) are kept available for maintenance and service records
- that inspection covers the emergency opening function (when applicable)
- that the closing force is appropriate for the door size on fire-approved door systems (when applicable).

Warranty

ASSA ABLOY Entrance Systems warrants its products to be free from defects in material and workmanship under intended use and service for a warranty time of 12 months, beginning at time of delivery. This warranty extends only to the original buyer of the equipment.

ASSA ABLOY Entrance Systems warrants that the software will operate substantially in accordance with its functional descriptions and that it has been recorded on non-defective media.

The ASSA ABLOY Entrance Systems warranty does not apply to

- That the software will be error-free or operate without interruption
- General wear and tear on the system
- Fuse, disposable batteries and glass damage
- System deviations caused by installer other than ASSA ABLOY Entrance Systems
- System that has been altered or damaged by vandalism or misuse
- System that has been additionally equipped with non-ASSA ABLOY Entrance Systems original branded parts and/or spare parts
- Unrequired visits due to poor client communication (door working when our technician arrives, reset, power discontinuation)
- Adjustments (closing and opening speed and also detection field radars) due to customer requests (excludes operational adjustments thought to create a hazard)
- Water damage
- Adverse weather conditions
- Any damage caused, directly or indirectly, by a circumstance beyond the control of the applicable company within ASSA ABLOY Entrance Systems, such as industrial dispute, fire, natural disaster, war, extensive military mobilization, insurrection, requisition, seizure, embargo, restrictions in the use of power and defects or delays in deliveries by sub-contractors caused by any such circumstances

Please note:

- Non-compliance with manufacturers care and maintenance recommendations may void the warranty.
- ASSA ABLOY Entrance Systems-authorized resellers shall extend this warranty to end-users only, but have no authority to extend a greater or different warranty on behalf of ASSA ABLOY Entrance Systems.
- A service agreement with ASSA ABLOY Entrance Systems will help secure the availability of a fully operational system and will give priority at call-out, thus minimizing the time that the equipment is unusable.

Service

Inspections should be done regularly by a trained and qualified person. The frequency of these inspections should be according to national regulations (or according to industry standard if there are no national regulations). This is especially important when the installation concerns a fire-approved door or a door with an emergency-opening function. To extend the life of your investment and ensure safe and reliable operation of the door, we recommend a minimum of 2 visits per year

or more, depending on usage and operating conditions. Environmental aspects shall also be considered.

As your entrances are part of your business flow, there's every reason to keep them working well. ASSA ABLOY Entrance Systems offers you a maintenance and modernization expertise to rely on. Our Maintenance Programs and Modernization Services for entrance automation is backed by a extensive expertise for all types of pedestrian- and industrial door and docking systems, independent of brand. At your disposal is a team of dedicated expert technicians, proven through decades of maintenance, service and satisfied customers.

Intended use

The door is designed to offer continuous use, a high degree of safety and maximum lifetime. The system is self-adjusting to the effects caused by normal variations in the weather conditions and to minor friction changes caused by e.g. dust and dirt.

This door is not intended for escape routes unless approved by local authority having jurisdiction. Do not use the door when there is more than 0.5 kN/m² wind pressure (corresponds to a wind speed of approximately 28 m/s).

The ASSA ABLOY RD600-2 is an automatic revolving door developed to provide draught free access to buildings.

The door can be used indoors or outdoors. Outdoor use with water resistant cover.

On page 4 you can find prohibited applications and reasonably foreseen misuse that is not allowed with this machine.

For installation and maintenance see Installation and Service manual 1015359.

On page 4 you can find prohibited applications and reasonably foreseen misuse that is not allowed with this machine.

Save these instructions for future reference.

Technical specification

| | | | |
|--|--|--------------------|--------------------|
| Manufacturer: | ASSA ABLOY Entrance Systems | | |
| Address: | Lodjursgatan 10, SE-261 44 Landskrona, Sweden | | |
| Type: | RD600-2 | | |
| Mains power supply: | 230V, 50/60Hz, mains fuse max. 10AT or 100-120V, 50/60Hz, mains fuse max. 16AT | | |
| Power consumption: | | No lighting | 12 W lights |
| | Stand-by | 60 W | 245 W |
| | On mode | 180 W | 365 W |
| | Idle | 55 W | 55 W |
| Temperature range: | -20 to +50°C | | |
| Degree of protection: | IP20 | | |
| Degree of protection, control actuators: | IP54 | | |
| Sound pressure: | $L_{pa} \leq 70 \text{ dB}(A)$ | | |
| Approvals: | Third party approvals from established certification organizations valid for safety in use, see Declaration of Conformity. | | |



In case of fire, use a fire extinguisher of type carbon dioxide (CO₂) or ABC dry powder.


How the ASSA ABLOY RD600-2 works

The RD600-2 is designed to maintain a draught-free environment at the same time allowing high traffic-flow with or without trolleys and wheelchairs. The large size of the compartment allows wheelchairs, shopping and luggage trolleys to easily and safely pass through the revolving door.

The door is designed so that operation is not affected or interrupted by winds or by users pushing the doors. However, in emergency situations or when power failure occurs, the door runs by battery to the emergency position. The lock for the escape doors, centre double swing door panels are released and can be manually broken out and give a clear evacuation path through the centre.

The RD600-2 design comes equipped with standard safety devices in both the horizontal and vertical plane.

Main parts

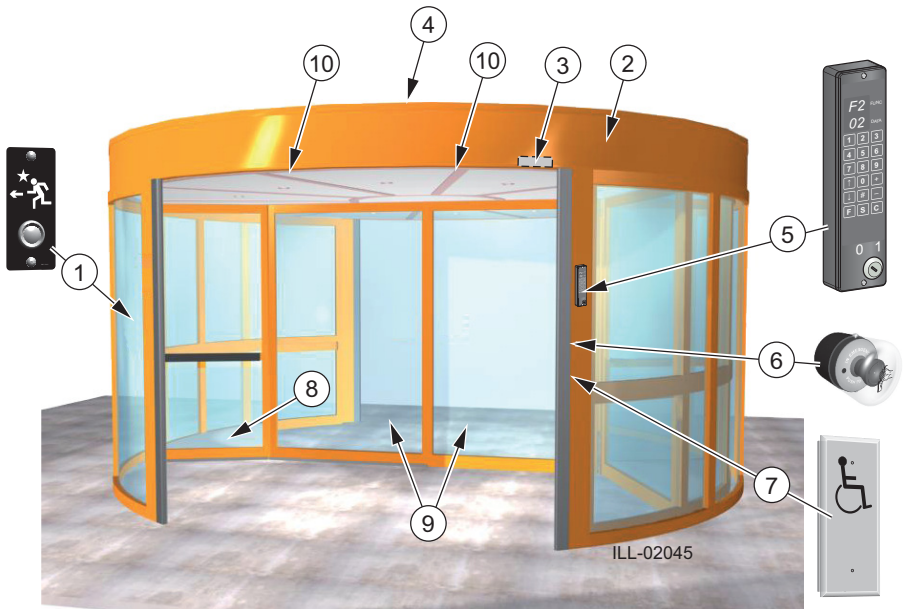


| No. | Description |
|-----|--|
| 1 | Push button inside, the door will rotate 360° |
| 2 | Main control unit CDC500 (behind fascia sheets) |
| 3 | Safety photocell (PDR) |
| 4 | Dust protection roof Standard: max load 0 kg, do not walk or store any material on the roof! With roof reinforcement option: max load 1500 kg (evenly distributed over the entire surface) |
| 5 | Program Control Device (PCD) with ON/OFF key switch (standard place) |
| 6 | Emergency stop button (inside) |
| 7 | Activation by disabled people: Recommended, if applicable (option) |
| 8 | Display area (max. load 25 kg/each) |
| 9 | Door leaves with escape function, where approved by local authority having jurisdiction |
| 10 | Activation units |

Settings and operation PCD

The PCD (Program Control Device) is used to select what operating mode is active when the ON/OFF switch is in the ON position. It is also used to check and set door configuration.


General information PCD

| Key | Function |
|---|---|
| 0-9 | Numeric inputs |
| # | Confirm access code input |
| ↑ | Setpoint selection upwards |
| ↓ | Setpoint selection downwards |
| + | Setpoint value change upwards |
| - | Setpoint value change downwards |
| F | Function selection |
| S | Setpoint confirmation and storage |
| C | Error clear (20, 30) Clear display Leave menu |
|  ILL-01914 | ON/OFF switch 1 = ON 0 = OFF |



Information prompts on PCD display

| Prompt | Description |
|--------|---|
| P1 | ON/OFF switch in OFF position. |
| P2 | Service request. Call ASSA ABLOY Entrance Systems for service. |
| P3 | Real time operation ON, see " Real time operation " on page 17. |
| P4 | Climate control ON |

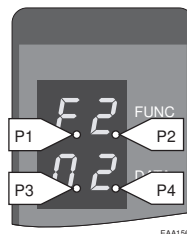

The door configuration must be set by ASSA ABLOY Entrance Systems Service technicians.

Access code

To be able to operate the PCD it is required to login with an access code.

Login on the PCD

- 1 Press #.
- 2 Enter the access code 1234. The display shows ==.
- 3 Press # to confirm the input.
If the access code is correct the display shows
LI (Login)
0 1 (Level 01)

In case of four consecutive failed login attempts, five minutes must pass before a new attempt can be made.

Logout from the PCD

- 1 Press #.
- 2 Enter the access code. The display shows ==.
- 3 Press # to confirm the input.
If the access code is correct the display shows
LO (Logout)
0 1 (Level 01)
- 4 Automatic logout ten minutes after the last key press.
- 5 Automatic logout can be inhibited by typing **F561** on the PCD.

Change access code


At delivery the access code is 1234. To change, follow the procedure below.

- 1 Type **#1234#**. If the access code is correct the display shows
LI (Login)
0 1 (Level 01)
- 2 Type **F41**. The display shows
F 4
L 1
- 3 Enter new code (4 digits).
- 4 Press **S** to confirm.
- 5 Enter the new access code a second time.
- 6 Press **S** to confirm.

The ON/OFF switch

The ON/OFF switch can be used in any of the operating modes 01-06 and 08-09 if automatic sliding doors are installed. In the ON (1) position, the door operates according to selected operating mode. Setting the switch to OFF (0) is indicated by prompt P1 on the display and is equivalent to selecting the operating mode Locked (OFF) 01 (see page 15).

Key impulse switch

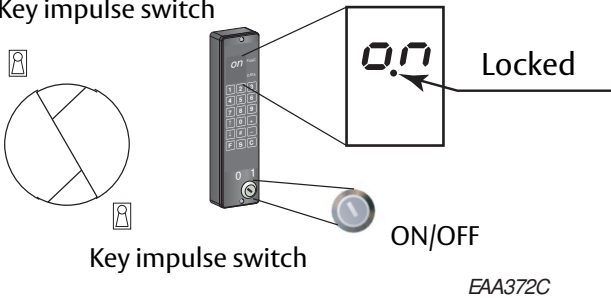

Key impulse switch (option)


If the door is locked with the ON/OFF switch it can be opened with a key switch (ask your local ASSA ABLOY Entrance Systems Service). When the key switch is activated, the door unlocks, runs 360° and locks again.

Changing operating mode

- 1 Login on the PCD.



- 2 Type **F2**. (The display shows F2 plus current operating mode.)
- 3 Use the up or down arrow to change the operating mode 01-09.
- 4 Confirm the change and exit the operating mode selection function by pressing **S**.

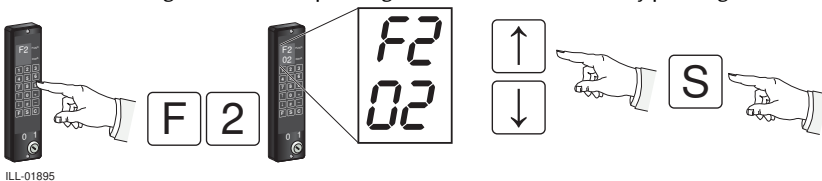


- 5 Logout from the PCD



The different operating modes


Locked (Off) 01

The door rotates to its closed position. If an electro-mechanical lock is fitted, the lock is activated. The door can be opened with the key impulse switch, see [Key impulse switch \(option\)](#) on page 14.

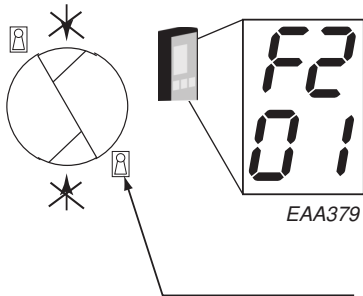


Automatic operation, start from open position 02

The door is parked in open position when there is no traffic. As soon as the outside or inside activation units detect approaching traffic, the door starts rotating.

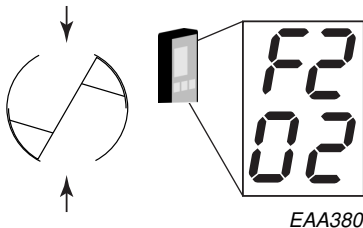


Automatic operation, start from closed position 03

The door is parked in closed position when there is no traffic. As soon as the outside or inside activation units detect approaching traffic, the door starts rotating.

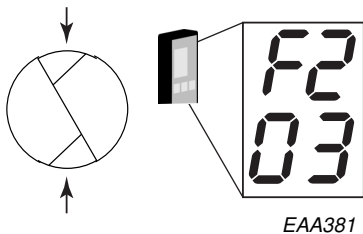


Automatic operation, start from open position exit only 04

The door is parked in open position when there is no traffic. As soon as the inside activation units detect approaching traffic, the door starts rotating.

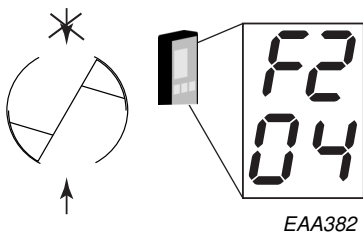


Automatic operation, start from closed position exit only 05

The door is parked in closed position when there is no traffic. As soon as the inside activation units detect approaching traffic, the door starts rotating.

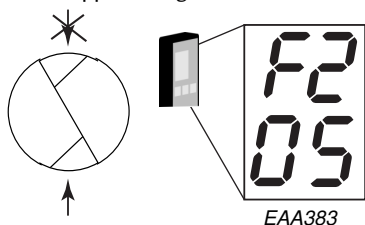

Continuous rotation 06


The door rotates at a low speed. As soon as the outside or inside activation units detect approaching traffic, the door accelerates to normal speed. The door returns to low speed when there is no traffic.

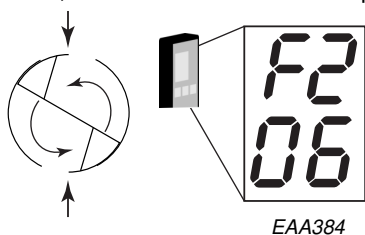

Manual operation "Cleaning position" 07


The door rotates forward as long as the key + is held down and backwards as long as the - key is held down.

Note: During manual operation, safety devices are disconnected.

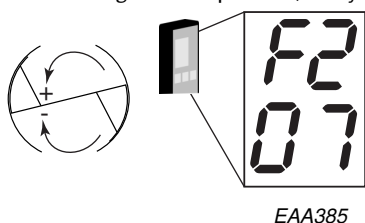


Summer position 08

The door is parked in the escape position and the escape doors are unlocked. Close the escape door before changing from summer position to automatic operation. If automatic service doors are installed, they will open automatically and remain open until another operating mode is selected or the ON/OFF switch is set to OFF.

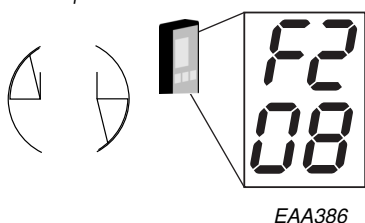

Automatic service doors 09

The door is parked in the escape position and the service doors are unlocked. As soon as the outside or inside activation units detect approaching traffic, the service doors opens.

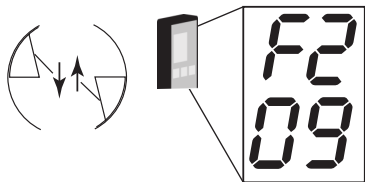

EAA387

PCD displaying operating mode

On the top row the PCD can show if the current operating mode is set by the user (on), external operating mode selection (oE), schedule (oS) or climate control functionality (oC). On the bottom row the current operating mode is displayed.

It can also show if the door is locked or unlocked during fire alarm and power failure.

| Display | Description | Activation |
|----------|---|---|
| on 02 | Top row showing that operating mode is set by user. Bottom row showing that operating mode 02 is active. | By default the PCD does not display operating mode. Type F53 . The display shows an option number and its setting, eg: 13 01. Use \uparrow or \downarrow to select option 13 . Press + or - to select setting 00 or 01 (00 = Disabled, 01 = Enabled) Press 5 to confirm the new setting. |
| on | Operating mode set by user | |
| oE | Operating mode set by external source | |
| oS | Operating mode set by schedule (Real time operation) | |
| oC | Operating mode set by climate control | |
| Lo cd | Locked (locked during fire alarm or power failure) | Locd (locked during fire alarm or power failure) is the default setting. A service representative can change the setting. |
| Lo bo | Locked (unlocked during fire alarm or power failure) | Contact your ASSA ABLOY Entrance Systems service representative. For contact information, see last page. |

Real time operation


Programming of real time operation must be done by ASSA ABLOY Entrance Systems service technicians. Fill in form on next page.

The CDC-system has three different day schedules. Each day schedule may contain up to 10 different operating modes. The week schedule informs the system of which day schedule to run and in what order during a week. It is possible to make up to 16 exceptions from this week schedule for e.g. public holidays etc.




Activation

Type **F556** (Real time operation ON).
Prompt P3 lights up.
The door operates according to schedule.



Deactivation

Type **F557** (Real time operation OFF).
Prompt P3 extinguishes.
The door operates according to manually set operating mode.



ON/OFF switch

The OFF (0) position overrides real time operation. The door will be locked. When set to the ON (1) position, the door resumes operation according to schedule.




Manual setting of operating mode

If the door is running in real time operation and the operating mode is manually changed, real time operation is automatically deactivated. To resume real time operation type **F556**.

Summertime/Wintertime

To change from summertime to wintertime, type **F53** and select option number 02 with arrow \downarrow/\uparrow keys. Press + or - to select setting 00 or 01, (summertime off (wintertime) is value 00 and summertime on is value 01) and press S (select). To check the time change, see [Real time clock](#).

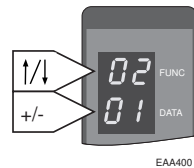

Day schedule

| Day schedule 1 | Day schedule 2 | Day schedule 3 |
|----------------|----------------|----------------|
| 1 | 1 | 1 |
| 2 | 2 | 2 |
| 3 | 3 | 3 |
| 4 | 4 | 4 |
| 5 | 5 | 5 |
| 6 | 6 | 6 |
| 7 | 7 | 7 |
| 8 | 8 | 8 |
| 9 | 9 | 9 |
| 10 | 10 | 10 |

Week schedule


| Week day | Schedule |
|-----------|----------|
| Monday | |
| Tuesday | |
| Wednesday | |
| Thursday | |
| Friday | |
| Saturday | |
| Sunday | |

Exceptions

| Start exception | End exception | Exception schedule |
|-----------------|---------------|--------------------|
| 1 | 1 | 1 |
| 2 | 2 | 2 |
| 3 | 3 | 3 |
| 4 | 4 | 4 |
| 5 | 5 | 5 |
| 6 | 6 | 6 |
| 7 | 7 | 7 |
| 8 | 8 | 8 |
| 9 | 9 | 9 |
| 10 | 10 | 10 |
| 11 | 11 | 11 |
| 12 | 12 | 12 |
| 13 | 13 | 13 |
| 14 | 14 | 14 |
| 15 | 15 | 15 |
| 16 | 16 | 16 |

Read speed settings

Type **F3**. The display shows S1.
Use **↑** or **↓** to select setpoint number to read.
Press **C** to leave the menu.

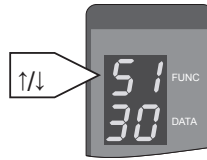

EAA254

| Setpoint | Description | Setpoint value |
|----------|-------------------------------|------------------|
| S1 | High speed setpoint | 0.5-4.0 rpm |
| S2 | Low (handicap) speed setpoint | 0.1-2.5 rpm |
| S3 | Creep speed setpoint | Fixed at 0.5 rpm |
| S4 | Continuous speed setpoint | 0.5-2.0 rpm |
| S5 | Manual speed setpoint | 0.1-2.0 rpm |
| S6 | Reverse speed setpoint | 0.1-2.0 rpm |
| S9 | Door force parameter | 02-99 |


Real time clock

The CDC system has a real time clock built in. The clock is used for event log recording and when the door is running according to a real time operation schedule.

Read real time clock

Type **F71**. The display shows 11 and the parameter value corresponding to year.
Use **↑** or **↓** to select parameter number and display the parameter value.
Press **C** to leave the menu.

Summer and wintertime, see [Summertime/Wintertime](#) on page 18.

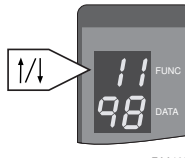

EAA168

| | |
|----|--------|
| 11 | Year |
| 12 | Month |
| 13 | Day |
| 14 | Hour |
| 15 | Minute |
| 16 | Second |

Safety

The safety systems are monitored to ensure the high safety level of the door.

The condition of the safety equipment is periodically tested. This monitoring is made during normal running conditions and it does not affect the normal day-to-day operations of the door.

Every 24 hours (normally at the first start up) the brakes and motors are tested. The test takes about one minute and is carried out as follows:

- 1 The door runs close to the closed position and stops.
- 2 The brakes are activated.
- 3 The door tries to run with the brakes on and checks for any movement.

Safety devices on the door



- Slow field
- Stop field

Touchless presence detection sensors placed in ceiling

Slow field, slows down the speed to 0.5 rpm.

When the slow field is activated the display shows **S25**.

Stop field, stops the door.

When the stop field is activated the display shows **S26**.

The sensors are monitored by the system twice every revolution. Depending on where the door is located the two detection fields can be configured to stop or to slow down the speed. Picture shows default setting.

The pressure sensitive safety edges


When a safety edge is compressed, the door stops with active brakes and the display shows **S10**.

Note! When the escape doors are not in locked position the display also shows **S10**.

The photocells PDR

The photocells, one inside and one outside, are in operation approx. 25° from the drum edge. They are in operation until the trailing edge of the rotating part has past the drum edge.

When the inside photocell is activated the display shows **S21** and when outside is activated it shows **S22**. As soon as the safety devices are deactivated the door starts and runs normally again.

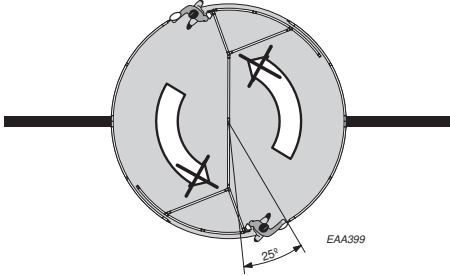

Note! If any of those displayed messages **S21**, **S22**, **S25**, **S26**, and **S10** are shown without any obvious cause, see Code list on page [Section Code list on page 29](#)).

Push buttons inside door

They will make the door rotate 360°.

These can be used if someone gets trapped in the door.




Even if the door is without mains power the push button wakes up the battery and gives an impulse.

Battery

Runs the door to emergency position in case of power failure.

Emergency operation

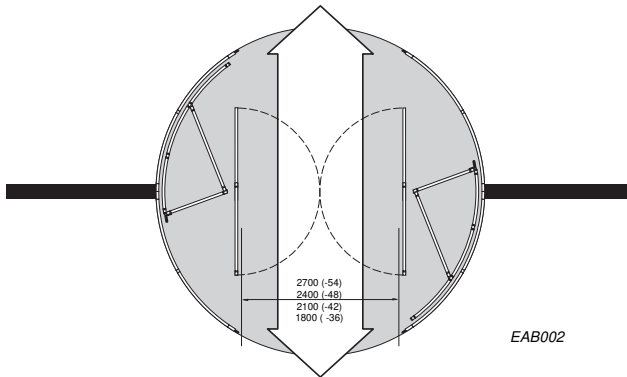

When power failure occurs, the door runs by battery to the emergency position. The lock for the escape doors, centre double swing door panels are released and can be manually broken out and give a clear evacuation path through the centre. The escape doors have to be manually closed after use. When closed, and mains is restored or the fire alarm system no longer indicates an emergency, the door will resume normal operation.

Fire alarm

If the door is connected to the building's fire alarm system, it will run to the emergency position and the escape door leaves will release when the fire alarm is activated. The display shows **S31**.

If the escape doors have been opened, perform the start up procedure, [Section Start up after power failure, fire alarm or other status codes on page 24](#).




Start up after power failure, fire alarm or other status codes

If the escape doors have been opened, the display shows **S10**.

To release the emergency lock and close the door leaves:


- 1 Press emergency stop button.
The display shows **E20** and the lock is released.
- 2 Turn back the emergency stop button.
- 3 Close the door leaves correctly and press **C** on the PCD.

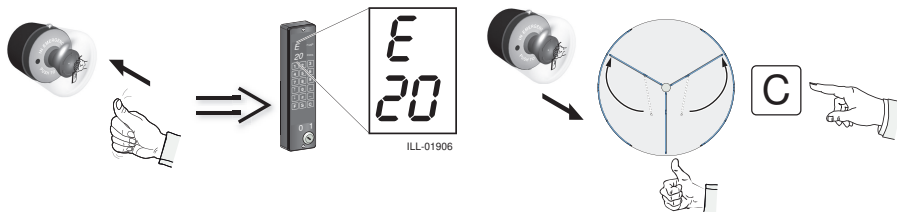

CLEANING

The best way to remove dust and dirt from the ASSA ABLOY RD600-2 and to maintain the quality of the enamel layer, the surfaces should be cleaned three times/year (once/four months period) with gentle (pH 5-9), non-polishing detergent and water. Use a soft non-abrasive sponge. The cleaning should be documented. To avoid damages to the profiles the brushes must be vacuum-cleaned weekly.

- Do not expose windows, doors or profiles to alkalis. Both aluminium and glass are sensitive to alkalis.
- Do not clean with high-pressure water. Operator, programme selector and sensor may be damaged and water may enter the profiles.
- Do not use detergents or abrasive additives.
- Do not scrub with materials like Scotch-brite, as this will cause mechanical damage.

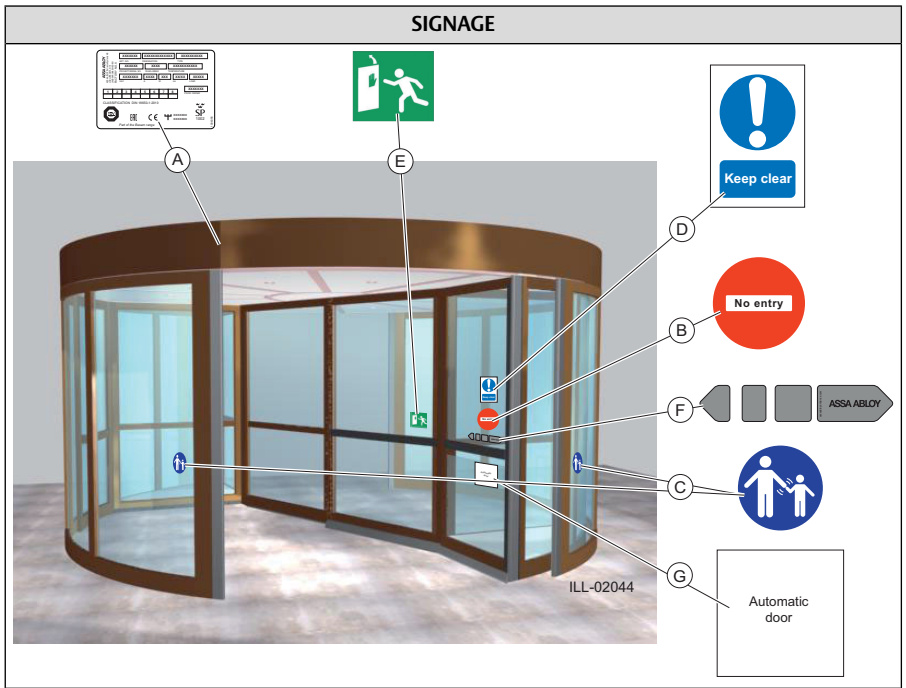

| Daily Action | | If problem occurs |
|--|---|-------------------|
| Check that all required signage is applied and intact. Mandatory indicates that the signage is required by European directives and equivalent national legislation outside the European Union. | | |
| (A) | Product label: Mandatory | |
| (B) | No entry, identifying one-way traffic: Mandatory in GB and US, if applicable, not included in the product. | |
| (C) | Supervision of child (applied to both sides of the door): Mandatory according to national regulations. Recommended, if the risk analysis shows use by children. | |
| (D) | Keep clear: Mandatory in GB, if applicable, not included in the product. | |
| (E) | Emergency break-out: Mandatory, if approved for escape route. | |
| (F) | ASSA ABLOY Entrance Systems door sticker: Mandatory, if applicable to highlight the presence of the glass (applied to all glass sections that are moving). | |
| (G) | Automatic door: Mandatory in GB, if applicable, not included in the product. | |

= Contact your ASSA ABLOY Entrance Systems service representative. For contact information, see last page.

Troubleshooting

| What's wrong? | Remedies |
|---|---|
| The motor does not start up | Make sure that the PCD display shows ON, and that mains power to the door is on. |
| | Check the operating mode, see The ON/OFF switch on page 14. |
| | Check that there are no objects in the safety detection zone. |
| | See Section Start up after power failure, fire alarm or other status codes on page 24 for start up procedure. |
| The motor starts but door will not rotate | Check that nothing is jammed beneath the door. |
| The door does not close | Change the setting of the program selector, see page 12 . |
| | Check that there are no objects in the safety detection zone. |
| | Check that nothing is jammed beneath the door. |
| If the problem continues, please contact your ASSA ABLOY representative. | |

Supervision system

The ASSA ABLOY RD600-2 has a built-in supervision system.

During normal operation the display will show ON. If an error occurs, the PCD display will show a status code. All status codes are shown with permanent figures. The exceptions are code 20 and 30, which will be shown flashing.

To reset the door to normal operation after a status code, type C on the PCD, [Section Code list on page 29](#).

Code list

| Code | Status | Cause | Remedy |
|------|---|--|---|
| on | The revolving door is functioning normally | | |
| 10 | Stop | | Check for obstacles between the wing and the floor and between the wing and the inside of the drum. Check safety edges. Close escape doors. |
| 11 | Electromechanical lock error | No signal from the electromechanical lock | Make one more unlock/lock operation. If that does not help call ASSA ABLOY Entrance Systems Service. |
| 12 | Mechanical lock locked | | Unlock the mechanical lock. |
| 20 | Emergency stop | Emergency stop button depressed | Release the button by turning it in the direction of the arrows, then restore function by pressing C on the PCD. |
| 21 | Response from the PDR sensor fitted above the opening on the inside | Inner PDR sensor activated | Remove obstacle in the inner detection zone |
| 22 | Response from the PDR sensor fitted above the opening on the outside | Outer PDR sensor activated | Remove obstacle in the outer detection zone. |
| 25 | Response from the touchless door leaf sensors (the door rotates slowly) | The detection zone of the touchless door leaf sensor activated | Remove obstacle in the detection zone. |
| 26 | Response from the touchless door leaf-sensors (the door stops) | The detection zones of the touchless door leaf sensors activated | Remove obstacle in the detection zone. |
| 30 | Blocked door | The wing is blocked by an obstacle | Check for obstacles between the wing and the floor and between the wing and the inside of the drum. After checking press C. |
| 31 | Fire alarm | The fire alarm system has, if connected, been activated | Steady 31 - fire alarm is active. Blinking 31 - fire alarm has been active, but not cleared. Press C on the PCD to clear the status. |
| 32 | Power fail input | Main power lost | Check main fuse. Check external power supply. |
| 36 | Battery error | Battery pack not charged. Emergency drive battery faulty | Allow the battery pack to recharge (30 min.). |

Note! In most cases the door can be locked with the electromechanical lock even if the door does not function. Push the door to the closed position, and lock the door with the ON/OFF key switch. The door has only one closed position, if the door does not lock, turn 180°.



= For all other status codes, contact your ASSA ABLOY service representative.
For contact information, see last page.

Service/Maintenance

Service and adjustments performed by your ASSA ABLOY Entrance Systems-authorized representative will ensure safe and proper operation of your automatic door unit.

This product may contain batteries that should only be replaced by an ASSA ABLOY Entrance Systems-trained and skilled technician.

Remember to keep "Service Log Book" and "Site Acceptance Test and Risk Assessment" documents (PRA-0003) available. These are used together.

It is important to record any maintenance operation.

The table below shows the recommended interval in revolutions, when to replace parts during preventive maintenance. Talk to your ASSA ABLOY Entrance Systems representative to learn more about our service offering.


Recommended minimum maintenance interval of once a year. See EN 16005.

| Part | Revolutions | Action |
|-----------------------------|--------------------------------|----------------------------|
| Motor | 300.000/1.500.000 | Check/Replace |
| Brakes | 200.000/3.000.000 | Check/Replace |
| Safety device | 300.000 or minimum once a year | Check and test of function |
| Impulse device | 300.000 | Check |
| Gear box | 3.000.000 | Check |
| Drive belt | 300.000/600.000 | Check/Replace |
| Motor carbon brushes | 300.000/600.000 | Check/Replace |
| Escape door locks | 300.000/3.000.000 | Check/Replace |
| Emergency stop button | minimum once a year | Check and test of function |
| Fire alarm, functional test | minimum once a year | Check |
| PCD, display | minimum once a year | Check |

Service request

After 200.000 revolutions the prompt P2 indicates that it is time for service.


Recommended minimum maintenance interval of once a year. See EN 16005.

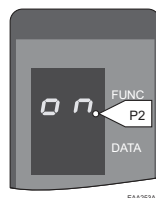

Options

Even though the RD600-2 is installed to comply with all applicable safety regulations, it is possible to enhance safety/comfort with the following add-ons (please contact your local ASSA ABLOY Entrance Systems company for detailed description).

Emergency stop button on the outside

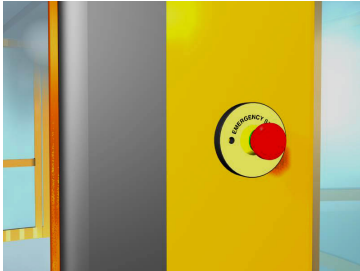

In case of an emergency, door rotation can be stopped by pressing the Emergency stop button. To reset the door to normal rotation after the emergency situation has ceased, [Section Start up after power failure, fire alarm or other status codes on page 24](#). The functionality of the emergency stop buttons shall be tested once a year.

Lock system

Electromechanical lock (option)

Doors in escape route can not be equipped with electromechanical lock.

When the door is in locked position the motorized 25mm lock bolt engages with a 10mm striker plate on the rotating part. If there are any problems with this lock the display shows **E11**. Make an unlock or a lock command when **E11** appears. If it does not disappear, call ASSA ABLOY Entrance Systems Service.

Mechanical lock (option)

Mechanical lock is used to lock the door when the door has lost power or due to status codes the door can not run to locked position. The display shows **S12** when the mechanical lock is activated. If the lock is used as an extra lock, the door must run to its locked position by operating mode 01 or the ON/OFF key switch set to OFF, before the mechanical lock key is turned.

Note! If the display does not show **S12** (ON remain), service shall be requested to avoid damage to the door.

Automatic sliding centre door leaves



The automatic sliding doors can, in addition to the PCD, also be operated by a separate key switch, that overrides operating mode 02-06 and 08-09 selected with the PCD.

The switch has 3 positions:



Normal rotation (automatic sliding doors off)



Automatic sliding doors activated



OPEN

When the switch is set to “automatic sliding doors” position, the revolving door rotates to its emergency position and stops.

The sliding doors opens when the outside or inside activation units detect approaching traffic.

When the switch is set back to “normal rotation”, the door will start to rotate as soon as the sliding doors are closed.

When the switch is set to OPEN, the revolving door rotates to its emergency position and stops. The sliding doors will then open, and stay open as long as the switch stays in this position.

Fire alarm

In case of a fire the door can be used for smoke evacuation. If connected to the fire alarm system, the revolving door rotates to its emergency position and stops. The sliding doors will then open, and stay open as long as the fire alarm is activated.

Reception panel

The reception panel contains a Program Control Device (PCD), a key impulse and an emergency stop button. The key impulse makes the door rotate 360°. The maximum distance from the door to the reception panel is 100 m.



Extra PCD

It is possible to have two PCDs connected to the CDC, example one on the door and one maximum 100 m from the door.

Climate control




Activation

Type **F554** (Climate control ON).

Prompt P4 lights up.

When the temperature is below the temperature set on the thermostat the climate control changes the following operating modes:

AUTO OPEN to AUTO closed
EXIT OPEN to EXIT closed
Continuous rotation to AUTO closed (operating mode AUTO closed will remain)

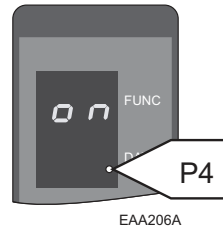

If the temperature remains below the thermostat setting, the climate output is activated after 10 minutes to start the air curtain.

Operating mode "Locked door" (01) or ON/OFF switch in OFF position automatically deactivates the climate output (air curtain OFF).

Operating modes Manual (07), Summer position (08) and Automatic Service door (09) do not deactivate the climate control output (air curtain remains ON if climate control input is active).

Deactivation

Type **F555** (Climate control OFF).

Prompt P4 extinguishes.

The door operates according to operating mode set by real time operation or manually.

Quick guide changing operating mode

#Access code# ---- #

F2 0_

↑ ↓

S

| | | |
|------------|--------------------------|--------------------------|
| | | |
| | | |
| | | |
| Locked | F556 = ON F557 = ON | F554 = ON F555 = ON |
| | | |

Other products from ASSA ABLOY Entrance Systems

- Door Systems
- Balance doors
- Vertical lifting fabric doors
- Dock levelers

- Air curtains
- Sliding doors
- Swing doors
- Automatic and manual activation units
- Overhead sectional doors
- Service such as preventive maintenance and upgrade programs, emergency repairs, service advice and door management
- Dock shelters
- Folding doors
- High speed doors
- Loadhouses

We **ASSA ABLOY Entrance Systems AB**
Lodjursgatan 10
SE-261 44 Landskrona
Sweden

declare under our sole responsibility that the type of equipment:
revolving door RD600-2

complies with the following directives:

2014/30/EU Electromagnetic Compatibility Directive (EMCD)

2006/42/EC Machinery Directive (MD)

2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment with the applicable amendments (RoHS)

2014/35/EU Low Voltage Directive (LVD)

Harmonized European standards which have been applied:

EN ISO 13849-1:2015

EN 60335-2-103:2015

EN 61000-6-2:2005/AC:2005

EN 61000-6-3:2007

EN 16005:2012+AC:2015

EN 61000-3-2:2014

EN 61000-3-3:2013/A1:2019/A2:2021

EN IEC 61000-6-2:2019

EN IEC 61000-6-3:2021

EN IEC 61000-3-2:2019

EN 60335-1:2012+AC:2014+A1:2019

+A2:2019+A11:2014+A13:2017+A14:2019

Other standards or technical specifications, which have been applied:

IEC 60335-2-103:2015+A1:2017

IEC 61000-3-2:2018

IEC 61000-3-3:2013/AMD1:2017

IEC 61000-6-2:2016

IEC 61000-6-3:2020

IEC 60335-1:2010+C1:2010+C2:2011

+A1:2013+A2:2016+COR1:2014

The manufacturing process ensures the compliance of the equipment with the technical file.

Installation has to be according to the installation instructions and preconditions for the installation location.

Compilation of technical file:

Anders Forslind

ASSA ABLOY Entrance Systems AB

Lodjursgatan 10

SE-261 44 Landskrona

Sweden

Place
Ferahrtorf

Date
2022-07-08

Signature
Mats Nordén



Position
Head of Product Development Product Area Door
Automation

ASSA ABLOY Entrance Systems is a leading supplier of entrance automation solutions for efficient flow of goods and people. Building on the long-term success of the Besam, Crawford, Albany and Megadoor brands, we offer our solutions under the ASSA ABLOY brand. Our products and services are dedicated to satisfying end-user needs for safe, secure, convenient and sustainable operations. ASSA ABLOY Entrance Systems is a division within ASSA ABLOY.

assaabloyentrance.com



ASSA ABLOY Entrance Systems

Tel: +46 10 47 47 000
info.aes@assaabloy.com
assaabloyentrance.com